

UltiController Menü-Struktur

Prepare

- Main
- Autostart
- Disable steppers
- Auto home
- Set origin
- Preheat PLA
- Preheat ABS
- Cooldown
- Move Axis
 - X
 - Y
 - Z
 - Extrude

Control

- Main
- Temperature
- Nozzle
- Fan speed

Motion

- Acc
- Vxy Jerk
- Vmax x
- Vmax y
- Vmax Z
- Vmax E
- Vtrav min
- Amax x
- Amax y
- Amax z
- Amax e
- A retract
- X steps-mm
- Ysteps mm
- Zsteps mm
- Esteps mm

Store memory

Restore failsafe

Card Menu

(Quelle: <http://wiki.ultimaker.com/UltiController>)